

## 11. OIL FILLING PROCEDURE

The hydraulic paddle unit are supplied by SADEV ready to use. But in case of loss of oil, follow below the procedure to adjust the oil level in the tank.

Use only mineral oil for hydraulic system (DEXRON III, ATF 430), never brake oil.

The tank must be fixed above the hydraulic unit.

- Shut down the electric motor. (A)
- Operate the paddles on the steering wheel "up/down" several times until the gear change stops.
- Open the cover with the level compensator "the level compensator still fixed to the cover"(B)
- Adjust the oil level to the Max mark.
- Reconnect the electric motor. (C)
- Close the cover with level compensator. (D)

